

Stirring Accessories

PTFE blade

		Approx. shaft dia. x length, mm	Smallest neck through which stirrer will pass	Blade width mm
QST7/2	Blade	—	19/26 Socket	52

Air-powered stirrers – see SR940.

Alternative stirrer bearings – see SR946.

Simple screwcap glands

Screwcap adapters may be used as simple glands for basic stirring operations providing they are not used at high speeds or under vacuum. The silicone rubber ring inside the cap should be suitably lubricated. Size 13 thread adapters are suitable for 6mm stirrer shafts and size 24 for 11mm shafts.

See QST51 to QST55

Ground sleeve glands

With lubricant reservoir. For use up to 700rpm and at pressures down to 0.1 torr (13.3 Pa). Rotation of the stirrer is achieved by coupling to a geared motor.

		To fit stirrer shaft mm	Cone size	Thread size
QST20/2	Screwcap sleeve	6	19/26	13
QST20/3	Screwcap sleeve	11	24/29	24



QST7 on shaft



QST51/52/53/54/55



QST2/2/SC



QST20/2